

List of Consumable Spare Parts of XCMG XE215C Excavator

Serial No.	Material Type	Material Name	Material No.	unit	installed quantity
1	maintenance parts	Oil filter	800151027	EA	1
2		Diesel filter	800107893	EA	1
3		Diesel filter	800151162	EA	1
4		Air filter element	800151039	EA	1
5		Air filter element	800151038	EA	1
6		Hydraulic return filter	803306840	EA	1
7		Hydraulic oil filter	803306841	EA	1
8		Hydraulic oil pilot filter	860151969	EA	1
9	consuming parts	Tooth	819950047	EA	5
10		Tooth pin	819948380	EA	5
11		Left tooth	819951081	EA	1
12		Right tooth	819951082	EA	1
13		Nuts	805203192	EA	10
14		washer	805338299	EA	10
15		bolt	805004832	EA	10
16		Track shoe	414101838	EA	94
17		Bolts (track shoes)	414100050	EA	188
18		Main chain rails	414101830	EA	2
19		Main pin	414102189	EA	2
20		Cotter pin	800347166	EA	2
21		Pin shaft	414102176	EA	92
22		Injection valve	800305497	EA	2
23		Rollers	414100425	EA	16
24		Bolt M18×90	805006281	EA	64
25		Fan belt	800104394	EA	1
26		Car V-belt	800140917	EA	1
27		Power relay	803608697	EA	1
28		Flameout relay	803608687	EA	1
29		Start relay	803608689	EA	1
30		main power switch	803608695	EA	1
31		Pressure Switch	803538020	EA	2
32		Fuel sensor	803504607	EA	1
33		Water level sensor	803504663	EA	1
34		Potentiometer with	803608815	EA	1
35		Throttle motor	800104270	EA	1
36		Extinguishing motor	800104326	EA	1
37		Relay	803608842	EA	7
38		speaker	803504609	EA	2
39		Hydraulic oil temperature sensor	803504717	EA	1
40		Oil level sensor	803504607	EA	1
41		Electronic pressure difference alarm	819908974	EA	1
42		Sender	803506008	EA	1
43		Sender	803544182	EA	1
44		Rocker switch	803608708	EA	1
45		Rocker switch	803608781	EA	1
46		Rocker switch	803608893	EA	1
47		Key switch	803608698	EA	1
48		Water pipe	800104931	EA	1
49		Underwater pipe	800104936	EA	1
50		Diesel tube assembly	310800780	EA	1
51		Diesel tube assembly	310800199	EA	1
52		Diesel tube assembly	310800174	EA	1
53		Pressure test connector	803302731	EA	1
54		Pressure test connector	803302730	EA	1
55		Level gauge	803173177	EA	1
56		Bearings	310702416	EA	4
57		Dust ring	803176145	EA	4
58	O-ring	310600273	EA	4	
59	Bearings	310702417	EA	2	
60	Dust ring	803172435	EA	2	
61	Adjustment mats	819908709	EA	2	
62	Bearings	310702418	EA	2	
63	Adjustment mats	819908693	EA	4	
64	Adjustment mats	819908694	EA	1	
65	Dust ring	803172436	EA	4	
66	Dust ring	803172437	EA	2	
67	Bearings	310702419	EA	2	
68	Adjustment mats	801102845	EA	2	
69	Adjustment mats	819908695	EA	2	
70	Adjustment mats	819908696	EA	2	
71	Hose assembly	803172218	EA	1	
72	Hose assembly	803172219	EA	1	
73	Butter mouth	801140026	EA	4	
74	Fuses	803608883	EA	2	
75	Fuses	803608735	EA	10	
76	Fuses	803608737	EA	4	
77	Fuses	803608738	EA	1	
78	Fuses	803608734	EA	6	
79	Repair parts	Excavator repair kit	860121342	EA	0
80		Bucket Cylinder Repair Kit	803202250	EA	0
81		Stick cylinder repair kit	803202249	EA	0
82		Boom cylinder repair kit	803202248	EA	0
83		Central rotary body repair kit	803202620	EA	0